


## CIRCLINE

## **MR** - Multiple Mount with Remote Driver Installation Instructions

WARNING: Disconnect main power at the source prior to installation! Only qualified electricians should install Alcon Lighting products.

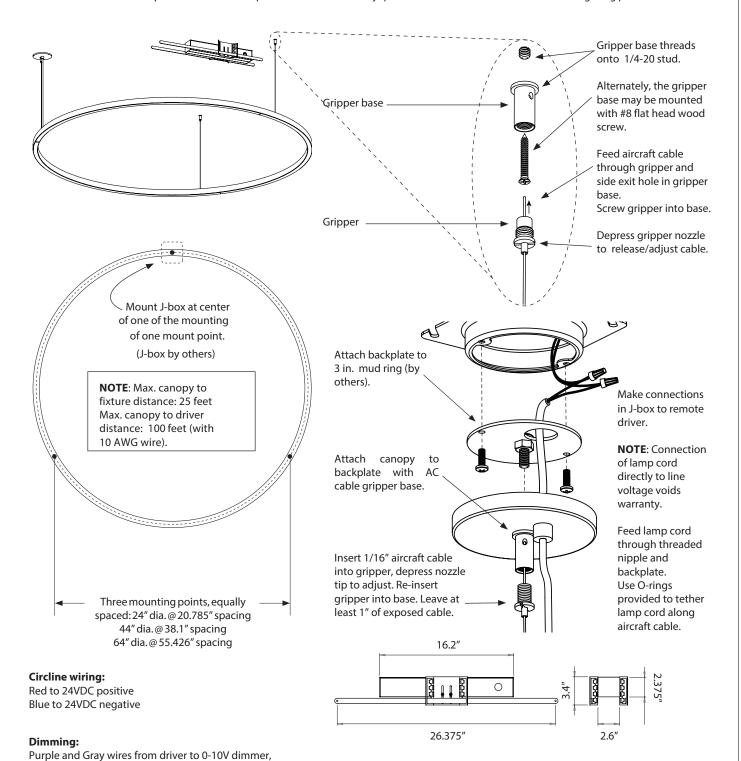

Remote driver includes bar hangers to mount above suspended ceilings. Drivers must remain accessible after installation.

Driver housing must not be mounted any closer than 4 inches apart. Bar hangers and brackets may be removed for direct mount to structure with screws. Connect J-box to driver housing with conduit (by others).

cap if not used.