 


# 12100-20 | 12100-40 - INSTALLATION INSTRUCTIONS FOR SURFACE MOUNT




RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY IN ACCORDANCE WITH NATIONAL, LOCAL BUILDING AND ELECTRICAL CODES, DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.



### Specifications: 12100-20

Width: 2.5 (64) Depth: 4 (101)

All dimensions are in inches (millimeters).

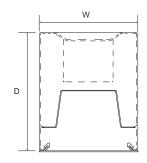

### Specifications: 12100-40

Width: 4 (101) Depth: 4 (101)

All dimensions are in inches (millimeters).


### PART LIST

A. SNAP-IN Lens B. LED module plate D. Self-drilling anchor screw


E. Washer

C. BX cable connector F. J-box


G. Screws

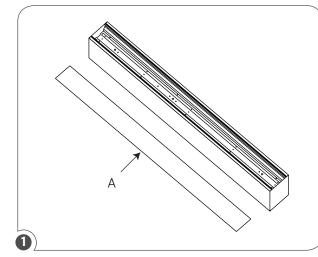


Remove SNAP-IN lens (A).

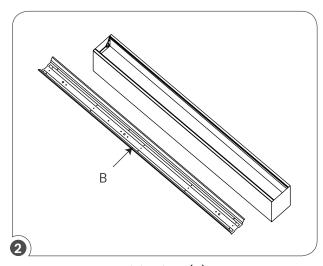

Remove LED module plate (B).

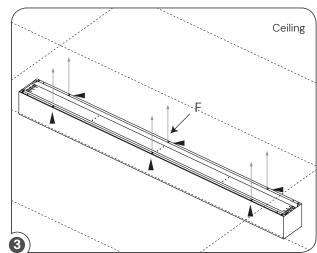


Align fixture to ceiling to mark holes and locate J-box (F).

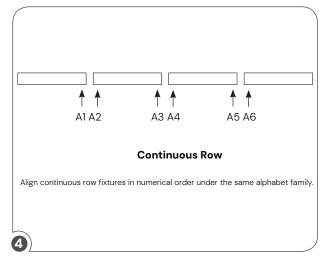


Refer to [4A, 4B] on the last page for detailed installation instructions.




# 12100-20 | 12100-40 - INSTALLATION INSTRUCTIONS FOR SURFACE MOUNT

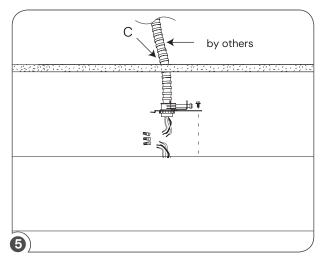


Knockout hole for BX cables (C) and make wire connection to Fixture wires.

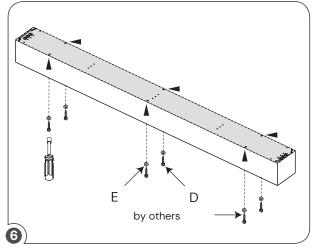

Screw fixture to ceiling using Self-Drilling Spiral Anchors (D) with washer (E).

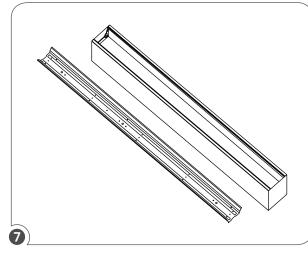

Install LED module plate.

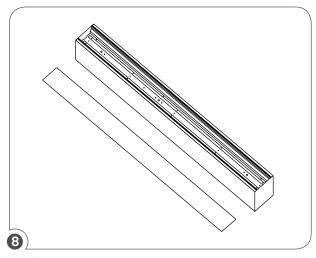

Close SNAP-IN Lens.



# 12100-20 | 12100-40 - INSTALLATION INSTRUCTIONS FOR SURFACE MOUNT


## **CONTINUOUS ROW**

## TOOL(S) NEEDED:

Option 1) Cordless drill and an elbow or L-shape adapter with Philips Insert Bit extension.

 
Option 2) Flexible Screwdriver with Philips Insert Bit.






#### **Continuous Row**

Align continuous row fixtures in numerical order under the same alphabet family.

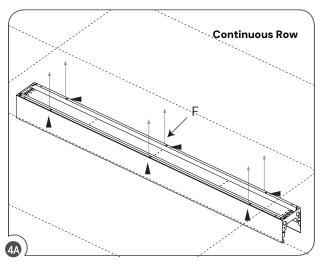

Align all continuous fixtures to ceiling to mark holes and locate J-box (F).

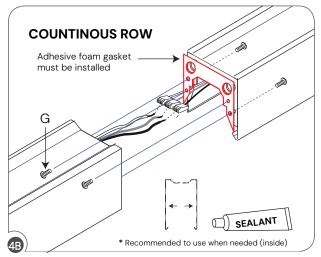

- 1) Make wiring connection from each fixture power supply wires together.
- 2) Align fixtures and screw together with 4 screws (G).

