




## INSTALLATION INSTRUCTIONS

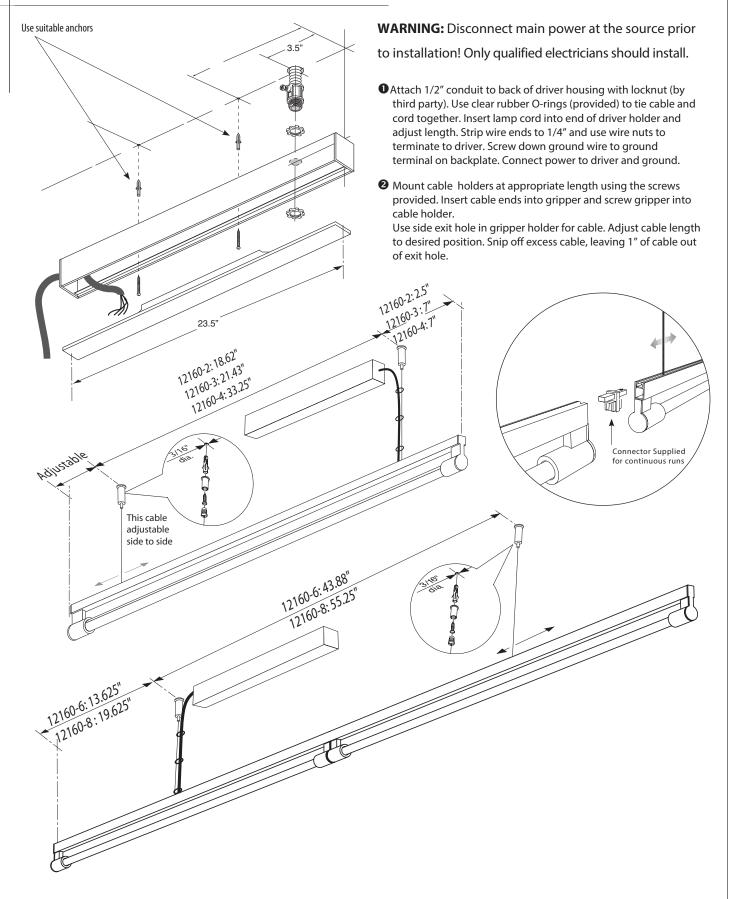




INSTALLATION INSTRUCTIONS

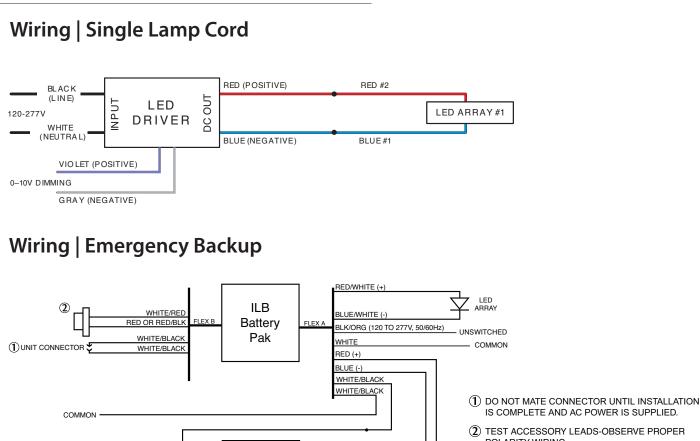

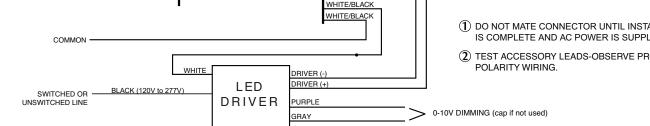

## **EM Fixtures**

Emergency backup fixtures have 47.25" long driver housings. 4' fixtures suspend directly from the driver housing cover plate with charge indicator light and test switch. EM backup for 4', 6' and 8' only.

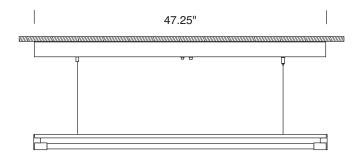

NOTE: Drivers must be accessible after installation, and must be mounted no less than 4 inches apart side-by-side and 1 inch apart end-to-end, to avoid overheating.

Maximum canopy to fixture distance: 25 ft. Maximum canopy to driver distance: 100 ft. (with 10 AWG wire).