



PLAN- CEILING CUTOUT

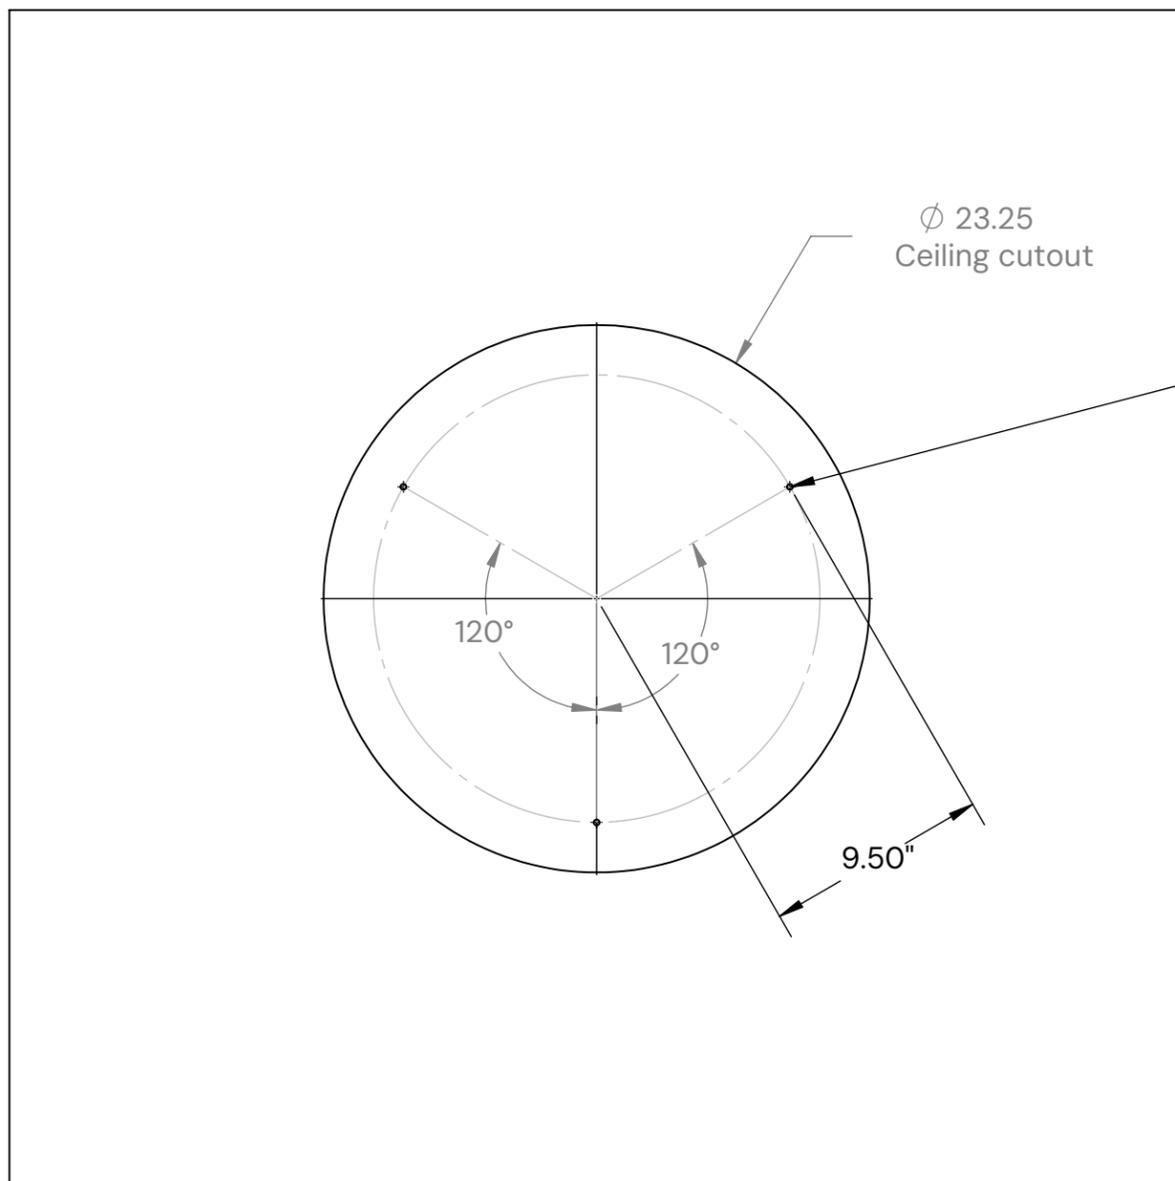

SIDE VIEW- CEILING CUTOUT

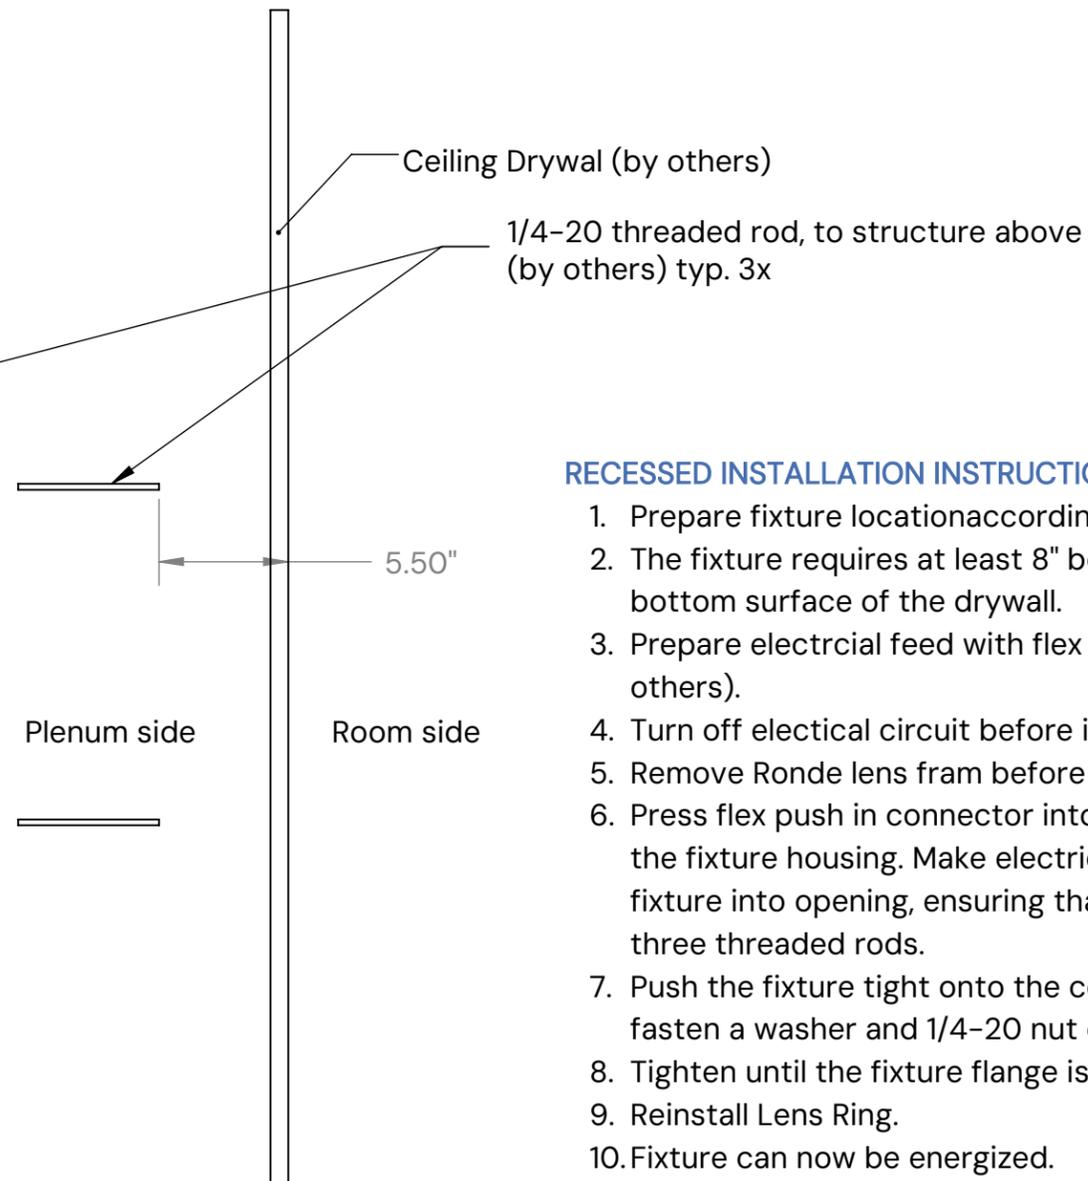

RECESSED INSTALLATION INSTRUCTIONS

1. Prepare fixture location according to the included plan.
2. The fixture requires at least 8" between structure and the bottom surface of the drywall.
3. Prepare electrical feed with flex and push in connector (by others).
4. Turn off electrical circuit before installing.
5. Remove Ronde lens from before installation.
6. Press flex push in connector into the center hole of the back of the fixture housing. Make electrical connections. Insert the fixture into opening, ensuring that its housing slides onto the three threaded rods.
7. Push the fixture tight onto the ceiling. Use a deep socket to fasten a washer and 1/4-20 nut onto each threaded rod.
8. Tighten until the fixture flange is tight against the drywall.
9. Reinstall Lens Ring.
10. Fixture can now be energized.