



**IMPORTANT** - This equipment is intended to be installed only by qualified personnel. The installation must be made in accordance with the current edition of the National Electrical Code and all applicable state and local building codes. The final installation must be approved by the appropriate, qualified electrical/building inspector(s). Improper installation may result in a fire or electrical hazard. Be sure the electrical power to the circuit has been disconnected before installing this electrical system.

### INSTALLATION STEPS

1. Make sure electrical power is off.
2. Insert wire through all stem(s) and threaded coupler(s).
3. Thread stems together with threaded coupler. Thread assembled stems to canopy and cylinder.
4. Connect the driver's input wires to the junction box wires. (Figure 1)  
Black to black, white to white. For 0-10V dimming: purple to purple, grey to grey.
5. Secure bracket on the junction box.
6. Mount the canopy with the LED driver inside to the bracket.
7. Check the connections and turn the power on.

### CHANGING BEAM ANGLE

1. Twist open top cover.
2. Remove the module for the 3" by using a flat screwdriver to turn the heat sink counter clockwise between the heat sink fins. (Figure 3)
3. Replace reflector at preferred beam angle.
4. Place the module back and lock the top cover.

