


INSTALLATION INSTRUCTIONS


NEW CONSTRUCTION INSTALLATION

1. Turn off power from the electrical panel before starting installation.
2. Secure new construction plate by screwing to joist. Adjust the new construction plate to the desired location. (Figure 1)
3. Install the mounting surface and cut a 2-7/8" diameter hole.
4. Run power supply leads through the mounting hole. Use NMD90 Romex or BX Cable.

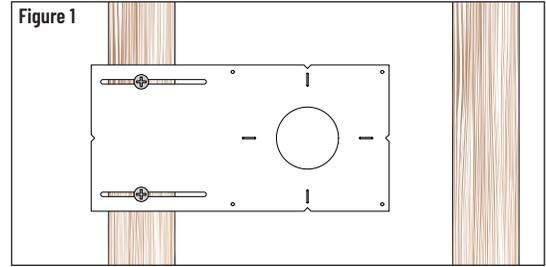



REMODEL INSTALLATION

1. Turn off power from the electrical panel before starting installation.
2. Locate a suitable position to install the fixture and cut a 2-7/8" diameter hole in the ceiling.
3. Run power supply leads through the mounting hole. Use NMD90 Romex or BX Cable.

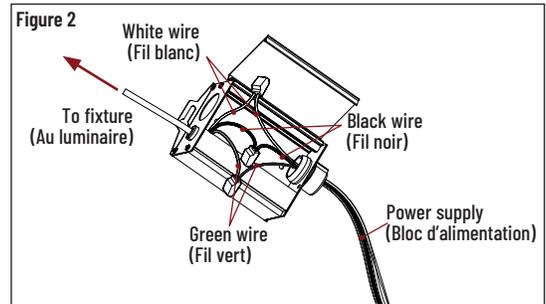



DRIVER WIRING

1. Open the remote driver box's cover and remove the appropriate knockouts.
2. Insert power supply leads through the knockout and secure with a cable connector. (not included)
3. Using push-in connectors, connect the same colored power supply lead wires to the fixture wires. (Figure 2)
4. Place all wiring and connections back into the remote driver box and close the cover.
5. Place junction box through the mounting hole and secure (Figure 3).

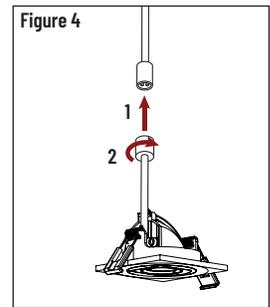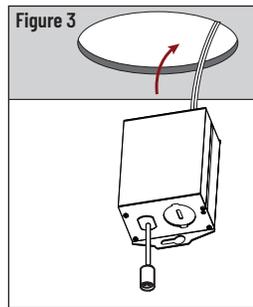

FIXTURE INSTALLATION

1. Connect the fixture to the junction box by inserting and twisting the male/female connectors. (Figure 4)
2. Push spring loaded clips on the fixture upwards and insert fixture base into the mounting hole. Release the clips and fixture will be pulled flush to the ceiling. (Figure 5)
3. Once assembly is complete, turn on power to confirm fixture is working properly.

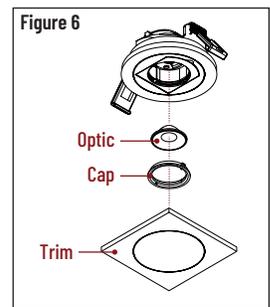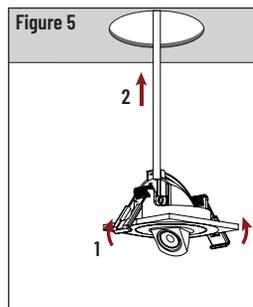

REPLACE OPTIC AND/OR TRIM

1. Turn off power from the electrical panel. If installed, remove from ceiling.
2. To replace optic, turn cap counter clockwise to unlock and replace (Figure 6).
3. To replace trim, turn counter clockwise to unlock and replace (Figure 6).
4. Connect the fixture to the junction box by inserting and twisting the male/female connectors. (Figure 4)
5. Reinstall fixture and turn on power to confirm fixture is working properly. (Figure 5)