

Well Lights



Assembly Instructions

- These fixtures are designed for in-ground mounting.
- 1- Remove fixture and its holder from PVC sleeve.
 - 2- To install bulb: Unscrew face plate of fixture. Push bulb pins into holes of socket carefully until seated. Then re-place face plate to fixture.
 - 3- Insert fixture and its holder into PVC sleeve to required position. Run main cable through bottom of PVC sleeve and hook it to fixture wires. Then insert PVC sleeve into ground about 3" above finish floor.

INSTRUCTIONS PERTAINING TO A RISK OF FIRE, OR INJURY TO PERSONS.

**IMPORTANT SAFETY INSTRUCTIONS
LIGHTED LAMP IS HOT!**

Warning: TO REDUCE THE RISK OF FIRE OR INJURY TO PERSONS:

- Turn off/un-plug and allow to cool before replacing lamp.
- Lamp gets HOT quickly! Contact only switch/plug when turning on.
- Do not touch hot lens, guard or enclosure.
- Keep lamp away from materials that may burn.
- Do not touch the lamp at any time. Use a soft cloth.
- Oil from skin may damage lamp.
- Do not operate the luminaire fitting with a missing or damaged shield.

Caution:

Fixture(s) must be installed in accordance with all local codes and ordinances.
Do not install within 10 feet of a pool, spa or fountain.


Installation Instruction

Fixture(s) should be used **"ONLY"** with low voltage landscape power units that do not exceed 25A, 15V.
The power units reduce the voltage from 120 volts to 12 volts.
The main cable from power units should be buried for less than 6 inches under the ground level and can be purchased from your local electric supply house.


1. Attach fixture(s) wires to main cable with cable connector suitable for direct burial.

Warning: Fixture(s) wires have to be run in close proximity to fixture(s) and not buried more than 3 inches.

Owen-9024 shown

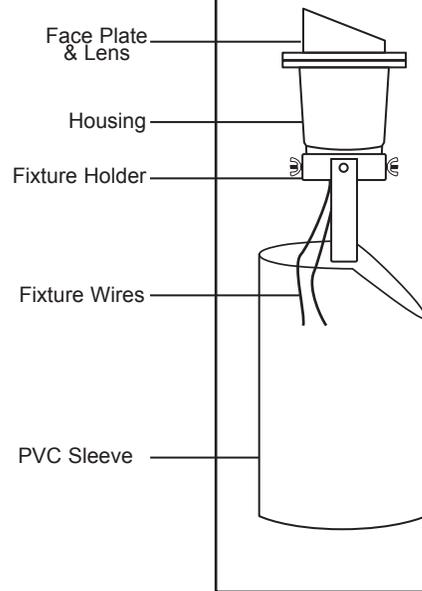

CL-231 shown

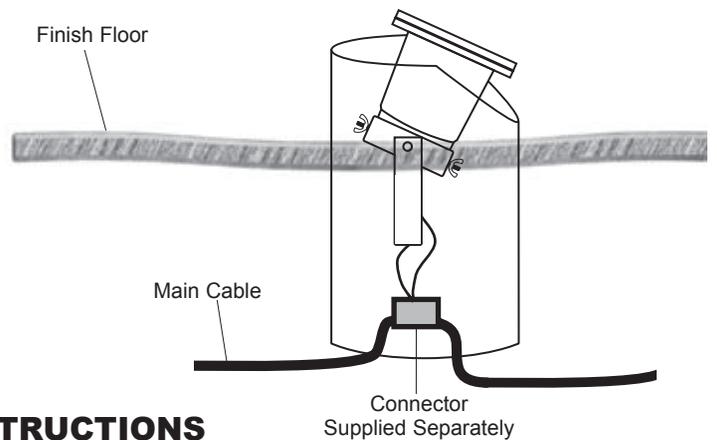

SAVE THESE INSTRUCTIONS

Limited Warranty

Alcon Lighting warrants its products to be free of defects in material and workmanship under normal use, when installed in accordance with installation instructions, specifications and accepted trade practices as follows:

- Aluminum and composite components: One year limited warranty from date of sale.
- Brass, copper, and stainless steel components: Limited lifetime warranty from date of sales.
- Transformers: Ten years limited warranty from date of sales. One year warranty for timers, photocells, and accesories. Limited life time warranty on stainless steel enclosures.

This warranty excludes:

1. Light bulbs.
2. Products not used in accordance with directions specified in installation instructions and subject to un-authorized repair.
3. Damages caused by accident, alteration, misuse, abuse and exceeding the cost of product.
4. Costs incurred in shipment, repair, replace, remove or install of product by buyer and others.

Limit of Liability and other conditions

- Alcon Lighting reserves the right to issue credit, repair or replace the defective product at our option upon receipt of written notification by original buyer of the alleged defect. Alcon Lighting assumes no responsibility for improper installation of the product and shall not be liable for any incidental or consequential damages resulting from use of this product.
- The use of other company's products or components in conjunction with Alcon Lighting's products may not be covered by UL classifications and could be hazardous. Such usage, whether covered by UL classifications or not, automatically voids Alcon Lighting product warranty.
- Alcon Lighting does not authorize any other warranty, verbal or written except as described here.
- Alcon Lighting reserves the right to make any changes to its products without prior notice.

Visit Alcon Lighting's Web Site @ www.alconlighting.com for complete products information.
Alcon Lighting, Inc.; Los Angeles, California