

INSTALLATION INSTRUCTRIONS

PRE-INSTALLATION - NEW CONSTRUCTION:

- 1. Turn off power from the electrical panel before starting installation.
- 2. Secure new construction plate by screw to the joist. Adjust the new construction plate to the desired location. (Figure 1)
- 3. Install the mounting surface and cut a 2-3/4" diameter hole.
- 4. Run power supply leads through the mounting hole. Use NMD90 Romex or BX Cable.

PRE-INSTALLATION - REMODEL:

- 1. Turn off power from the electrical panel before starting installation.
- 2. Locate a suitable position to install the fixture and cut a 2-3/4" diameter hole in the ceiling.
- 3. Run power supply leads through the mounting hole. Use NMD90 Romex or BX Cable.

DRIVER WIRING:

- 1. Open the remote driver box's cover and remove the appropriate knockouts.
- Insert power supply leads through the knockout and secure with a cable connector. (not included)
- 3. Using push-in connectors, connect the same colored power supply lead wires to the fixture wires. (Figure 2)
- 4. Place all wiring and connections back into the remote driver box and close the cover.
- 5. Place junction box through the mounting hole and secure (Figure 3).

FIXTURE INSTALLATION:

- Connect the fixture to the junction box by inserting and twisting the male/female connectors. (Figure 4)
- 2. Push spring loaded clips on the fixture upwards and insert fixture base into the mounting hole. Release the clips and fixture will be pulled flush to the ceiling. (Figure 5)
- 3. Once assembly is complete, turn on power to confirm fixture is working properly.

INTERCHANGEABLE TRIM AND INSERT INSTALLATION (NM2-2R ONLY):

- 1. Turn off power from the electrical panel. If installed, remove from ceiling.
- 2. Twist to unlock the trim and replace with desired trim / insert (Figure 6).
- 3. Connect the fixture to the junction box by inserting and twisting the male/female connectors. (Figure 3)
- 4. Push spring loaded clips on the fixture upwards and insert fixture base into the mounting hole. Release the clips and fixture will be pulled flush to the ceiling. (Figure 5)
- 5. Reinstall into ceiling and turn on power to confirm fixture is working properly.











