







### Multi-function RGB+W DMX Controller

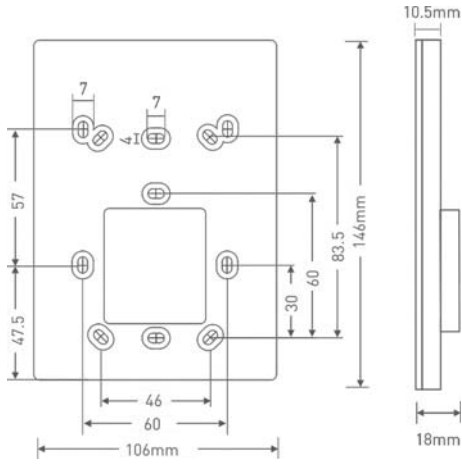

Touch Panel

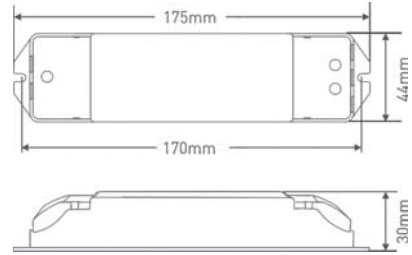


Receiver

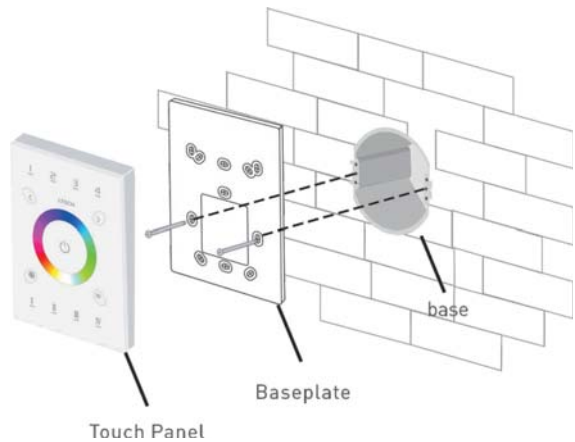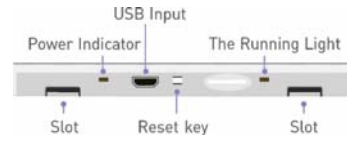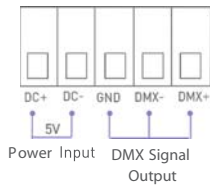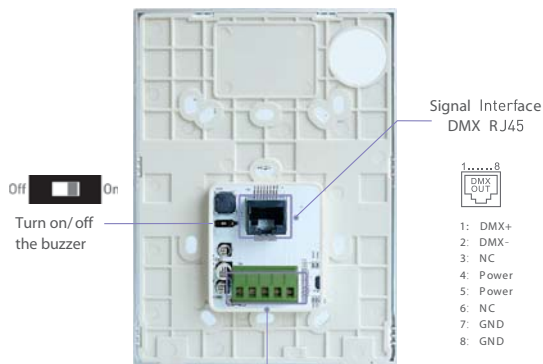


## Multi-function RGB+W DMX Controller


1. Install the back box into the wall. Typical box as below:

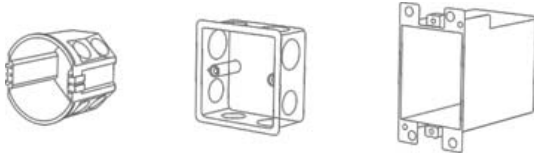


2. Use a straight screwdriver to pry the position shown:

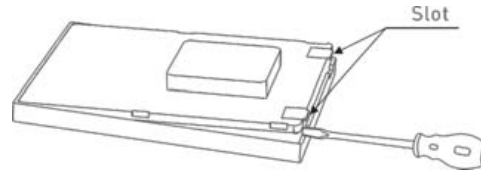


3. Screw the baseplate and the back box in the wall firmly.

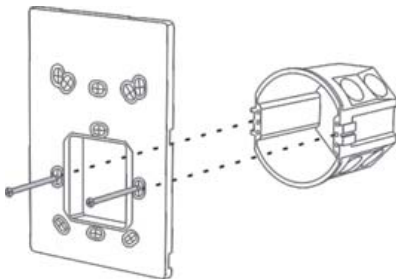


4. Connect in a right way and put the power adapter into the back box.

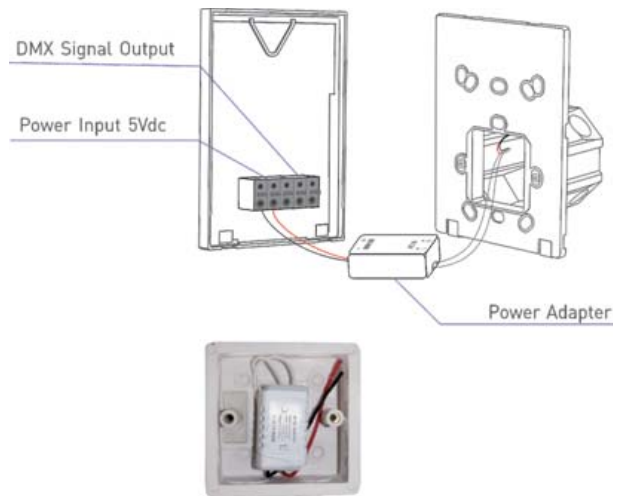

5. Embed the upper touch panel into the baseplate and then tap the bottom to press into the slots.

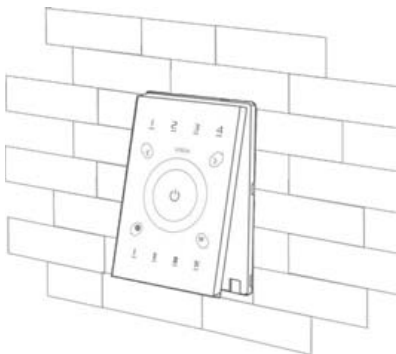

## Multi-function RGB+W DMX Controller Key Functions

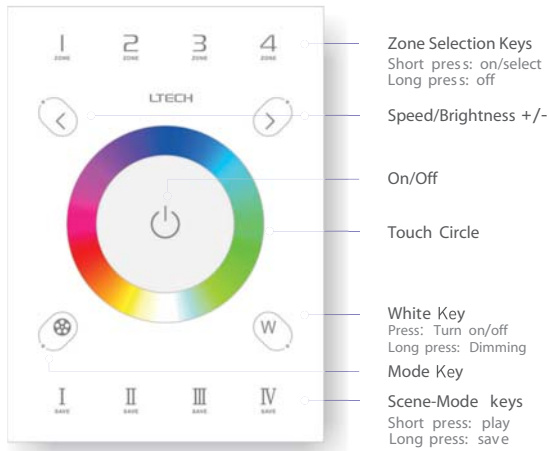

The Changing Mode (Press  to Select):

1. Static Red
2. Static Green
3. Static Blue
4. Static Yellow
5. Static Purple
6. Static Cyan
7. Static White
8. RGB Jumping
9. 7 Colors Jumping
10. RGB Smooth
11. 7 Colors Smooth
12. Static Black

## DMX Output Wiring

