




READ ALL INSTRUCTIONS BEFORE INSTALLATION. IMPROPER INSTALLATION MAY RESULT IN ELECTRIC SHOCK, SERIOUS INJURY, OR DEATH. FOLLOW ALL APPLICABLE ELECTRICAL CODES FOR YOUR SAFETY.

IMPORTANT SAFETY INSTRUCTIONS

This fixture is designed for use with PAR-30 or R-30 lamps up to 100W. Ensure the power is switched off before starting installation. The pendant version of this fixture can be installed using either a rigid stem or adjustable aircraft cable (cord). Verify that the mounting surface and junction box can support the fixture's weight.

Pendant Mounting - Cord

1. Secure the crossbar to the outlet box using the screws provided with the box.
2. Attach the ground wire to the green grounding screw on the crossbar.
3. Connect the fixture's black (hot) wire to the black (hot) wire from the outlet box.
4. Connect the fixture's white (neutral) wire to the white (neutral) wire from the outlet box.
5. Mount the canopy to the crossbar and fasten it in place using the supplied screws.

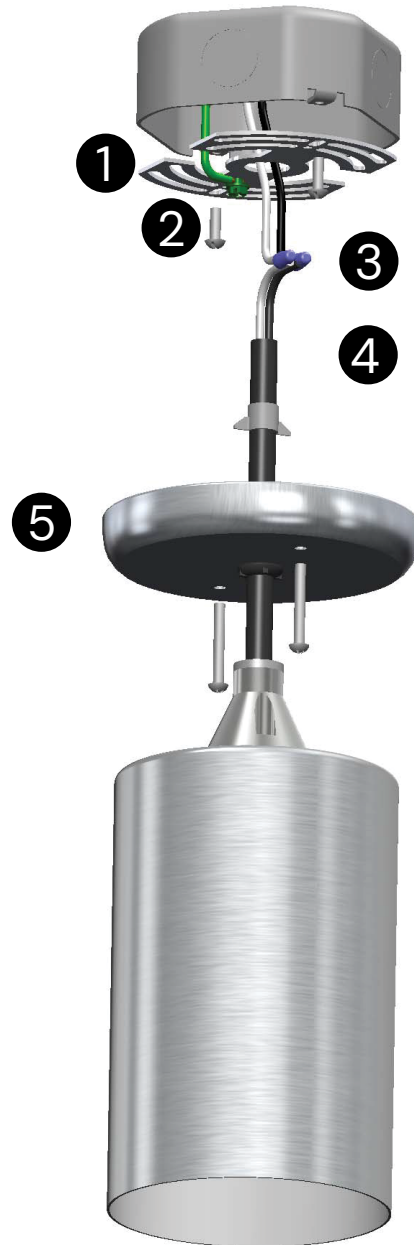




READ ALL INSTRUCTIONS BEFORE INSTALLATION. IMPROPER INSTALLATION MAY RESULT IN ELECTRIC SHOCK, SERIOUS INJURY, OR DEATH. FOLLOW ALL APPLICABLE ELECTRICAL CODES FOR YOUR SAFETY.

Pendant Mounting – Stem

1. Secure the crossbar to the outlet box using the screws from the box ears.
2. Fasten the ground wire to the green screw on the crossbar.
3. Connect the fixture's colored wire to the corresponding colored wire in the outlet box.
4. Connect the fixture's white wire to the white wire in the outlet box.
5. Attach the canopy to the stem using the supplied knurled ring and nut.
6. Mount the fixture to the crossbar with the provided screws.

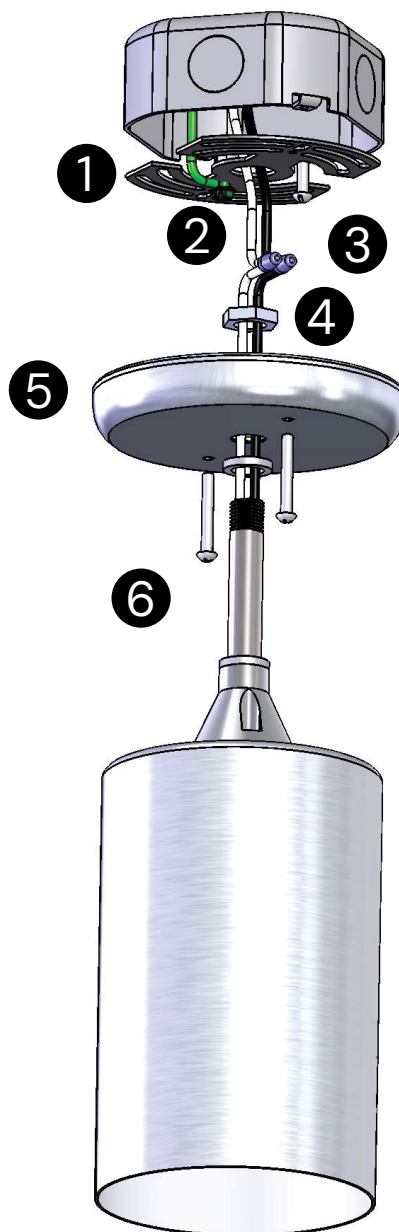



READ ALL INSTRUCTIONS BEFORE INSTALLATION. IMPROPER INSTALLATION MAY RESULT IN ELECTRIC SHOCK, SERIOUS INJURY, OR DEATH. FOLLOW ALL APPLICABLE ELECTRICAL CODES FOR YOUR SAFETY.

Pendant Mounting – Sloped Ceiling Stem

1. Match and connect the fixture wires to the outlet box wires: green to green, white to white, and black to black.
2. Ensure the swivel ball is properly seated in the yoke opening and moves freely.
3. Secure the yoke assembly to the outlet box using the screws from the box ears.
4. Slide the canopy upward and twist to lock it onto the yoke tabs, securing it in place.

