


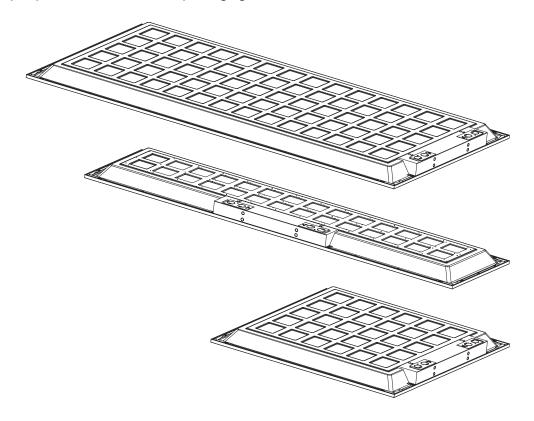


INSTALLATION

1. Carefully unpack the fixture from it packaging and check contents




- 2. Turn off power at circuit breaker
- 3. Locate all four earthquake clips on the back of luminaire. Twist each tab away from luminaire hook them on the T-bar.

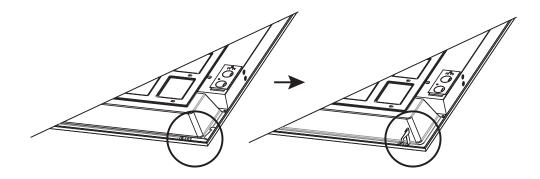




4. Rest the Luminaire on the T-Bar of the ceiling suspension system in the desired location.

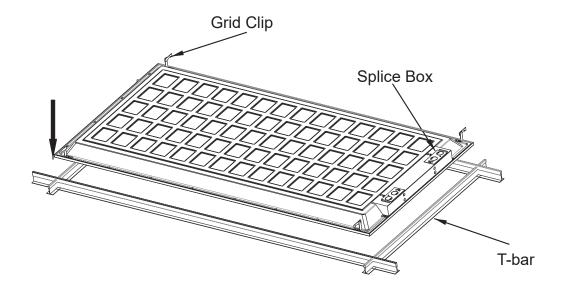

- 5. Open the connection box and connect the incoming electrical wires to the set of power wires black to black(Live), white to white(Neutral) and green to green(ground). See wiring diagram.
- 6. For 0-10V dimming, make sure connect the same wire color . See wiring diagram.

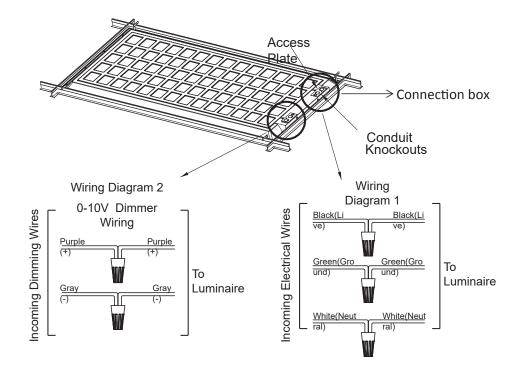






7. Check the wiring, make sure everything is correct. Recover the connection box. Then turn on power to light up the luminaire.

WARNING

- TO AVOID ELECTRIC SHOCK OR COMPONENT DAMAGE, DISCONNECT POWER BEFORE ATTEMPTING INSTALLATION OR SERVICING.
- THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE NATIONAL ELECTRIC CODE(NEC) AND ALL APPLICABLE FEDERAL, STATE AND LOCAL ELECTRIC CODES AND SAFETY STANDARDS.
- PLEASE FOLLOW THE CORRECT INSTALLATION INSTRUCTIONS TO INSTALL THE PRODUCT
- DO NOT USE THE PRODUCT UNDER WET LOCATION


SURFACE MOUNTING FRAME

 SNAP CORNER BRACKET TO EXTRUDED RAILS, MAKING SURE THAT MOUNTING FLANGES ARE ON OPPOSITE SIDES.





2. ATTACH FRAME TO CEILING STRUCTURE.

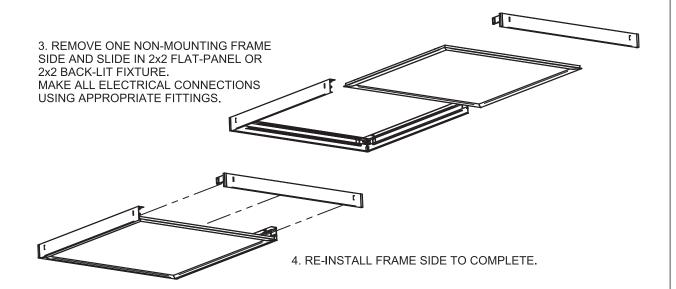







RECESSED FLANGED KIT

Installation Steps:


1. Screw and fix the springs

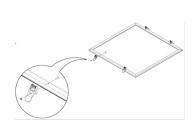

2. Put the fixture in the recessed kit

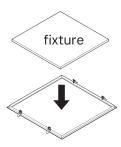

3. Insert the kit with fixture into the ceiling Follow the wiring instruction of fixture to connect it to AC power. And then,insert one side first (figure 1),and then the other side (figure 2).

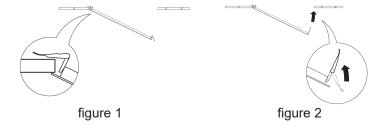

4. Finish the installation, power on and enjoy the light.

