

INSTALLATION INSTRUCTIONS

1. Gather items for assembly:

- Aluminum profile
- Frosted lens
- LED tape light



2. Take aluminum profile and apply silicone to inside portion where LED tape light will rest.



3. Lay LED tape light down onto aluminum profile, pressing it gently onto silicone.




4. Apply silicone to both ends of profile.



INSTALLATION INSTRUCTIONS

5. Attach end caps, and seal both ends of the profile by applying silicone.

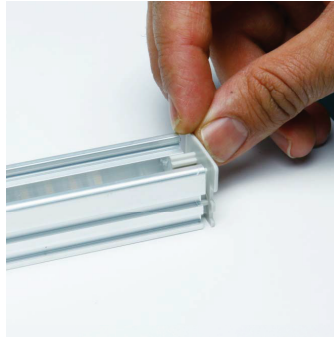


6. Apply silicone along sides where the lens will rest. Make sure to leave a small section on one side without silicone to allow air to escape while installing lens.



7. Carefully lay lens down onto profile. Sides will snap into place securely.



8. Apply silicone above portion where air was allowed to escape. (step 6)

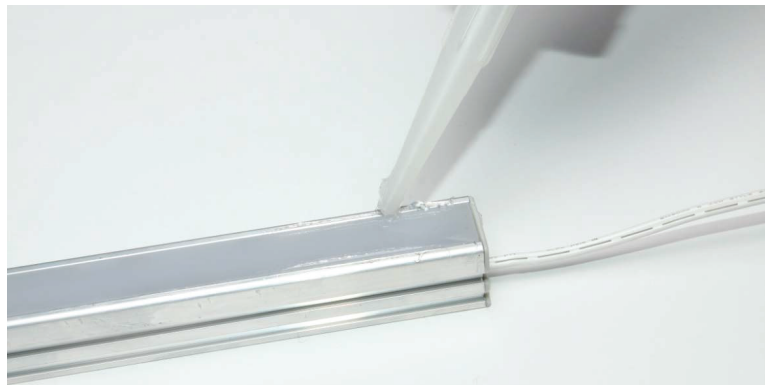

INSTALLATION INSTRUCTIONS

8. Apply silicone above portion where air was allowed to escape. (step 6)

