



PARTS LIST

- ❶ Junction box
- ❷ Modular Downlight/ Trimless Downlight
- ❸ Spring clips
- ❹ Connector

COMPATIBLE DIMMER LIST

Levilon: 6672 /6674
 Lutron: CTCL-153P, DVCL-153P, S-600P, SLV-600P, CN-600P, DVWCL-153P, CTCL-153PR, DVCL-153PR.

Trim Model	Dimensions(DXL)	Specification	Power	Voltage	Cutout Size	Equivalent to	Application
 Round	5-1/2"X3-1/2"X4"	4" Trimless Round Downlight	10W	120VAC / Triac Dimmable	03-5/8"	90W Halogen	IC Rated
 Square	5-1/8"X3"X4"	4" Trimless Square Downlight	10W	120VAC / Triac Dimmable	3-1/2"X3-1/2"	90W Halogen	IC Rated

MAINTENANCE

- Do not modify this fixture. Any modifications may render the product unsafe and void warranty.
- This product is suitable for damp locations.

Limited Warranty





The warranty applies to the product from the original date of purchase for five (5) years against manufacturing defects. The owner must provide a copy of the original proof of purchase. The manufacturer's obligation under this warranty is limited to repairing or replacing the component. It is not related in any way to the cost of the connection, the installation of the replacement parts or cost of transport.

3" Modular COB LED Downlight Installation Guide



WARNING: Turn power OFF from electrical panel before installation or maintenance

1. Turn power OFF from the electrical panel prior to installation.
2. Determine the location for installation and cut ceiling hole in accordance with cut-hole dimensions. Refer to Hole Diameter table for appropriate sizes. (Fig. 1)
3. Open the junction box cover and remove the appropriate knockout(s) on the side panel. (Fig. 2)
4. Insert the electrical supply cable through the knockout and secure with a cable connector (sold separately).
5. Using quick-connect push-in terminals, connect the ground wire to the green wire terminal; black wire to black wire terminal; white wire to white wire terminal. (Fig. 2)
6. Place all wiring and connections back in to the box and close the cover. Connect the driver to the light panel.
7. Insert junction box through the mounting hole. (Fig. 3)
8. Push spring-loaded clips on the fixture upwards and insert fixture base in to the mounting hole. Release the clips and fixture will be pulled flush to the ceiling. (Fig. 4)

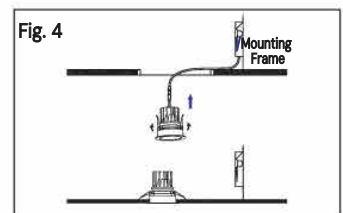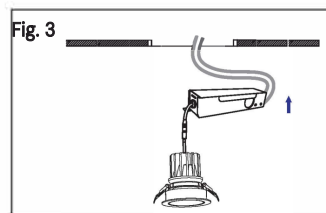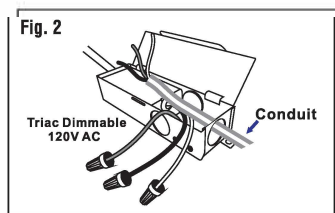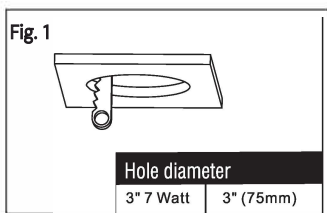

4" Trimless Downlight Installation Guide


1. How to put the lamp body into Built-in fitting

After putting the built-in fitting into the ceiling, in alignment with the position design, insert the lamp body into built-in fitting.

Press the trim to lock with elastic terminal. (Fig. 1)

2. How to take off lamp body from the built-in fitting

Only with a press to the trim on the lamp body, the elastic terminal will unlock, then can easily take out the lamp body from the built-in fitting. (Fig. 2)

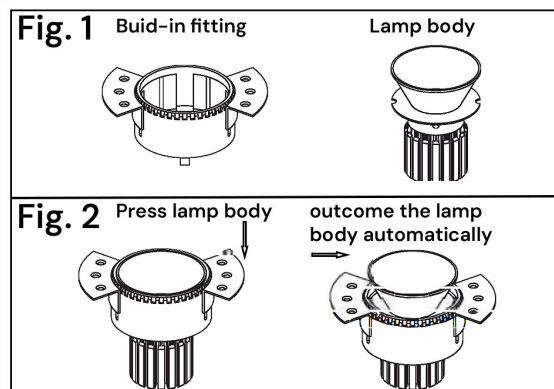

Installation Manuals:

1. Determine the location for installation and cut ceiling hole in accordance with cut-hole dimensions. (Fig. 1)
2. Mounted the Built-in Fitting into the ceiling, screws to lock it. (Fig. 2)
3. Paint the ceiling 2-3 times to make it smooth (Fig. 3)
4. Insert junction box through the mounting hole, connected all the wires on the junction box, connect the driver with the lamp body. Then press the trim to lock the lamp with the built-in fitting. (Fig. 4)
5. Turn on the light to test the light. (Fig. 5)

