ALCON LIGHTING

WARNING: RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY IN ACCORDANCE WITH NATIONAL, LOCAL BUILDING AND ELECTRICAL CODES. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.

15209-16-PL INSTALLATION INSTRUCTIONS FOR COB BOARD REPLACEMENT




Safety Precautions:

- **Read Carefully:** Read all instructions before installation and keep them for future reference.
- **Qualified Installation:** Installation must be performed by a qualified electrician only, in accordance with national and local building and electrical codes.
- **Avoid Wet Conditions:** Do not install or service this fixture in wet conditions.
- **Verify Power Source:** Disconnect power at the electrical panel before installation or servicing, and confirm that power is off before starting.

Part List:

1. Heat sink with thermal pad
2. LED COB board
3. LED cover with studs
4. LED mounting screws
5. Shade
6. Shade mounting plate
7. Mounting nut

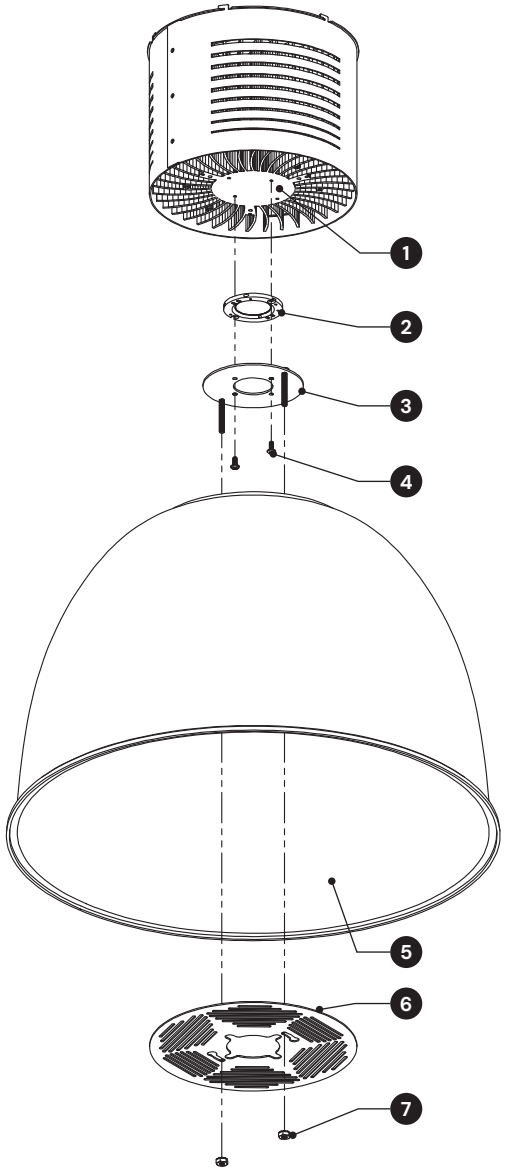


ALCON LIGHTING

WARNING: RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY IN ACCORDANCE WITH NATIONAL, LOCAL BUILDING AND ELECTRICAL CODES. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.


15209-16-PL INSTALLATION INSTRUCTIONS FOR COB BOARD REPLACEMENT

Steps:

1. Remove and retain the mounting nuts, then slide the shade mounting plate and shade off the LED cover studs.

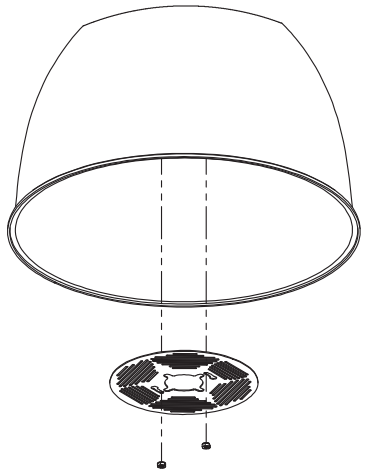

2. Remove and retain the LED mounting screws, then remove the LED cover, LED COB board, and thermal pad from the heat sink.

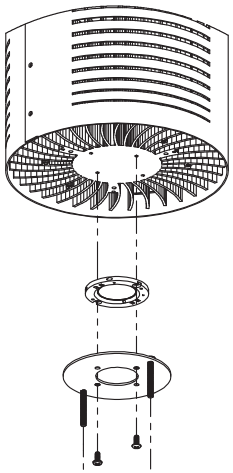

3. Replace the old LED COB board with the new one, then re-mount the thermal pad, LED COB board, and LED cover onto the heat sink using the screws removed in Step 2.

   Re-mount the shade and shade mounting plate onto the studs using the mounting nuts removed in Step 1.

