

WARNING:




Risk of fire or electric shock. Installation requires expertise in LED lighting fixture electrical systems. If unqualified, do not attempt installation—contact a certified electrician.

15209 – INSTALLATION INSTRUCTIONS

Part List

- ① Main Body Assembly
- ② Shade Retainer Disk
- ③ Shade (Aluminum or Polycarbonate)

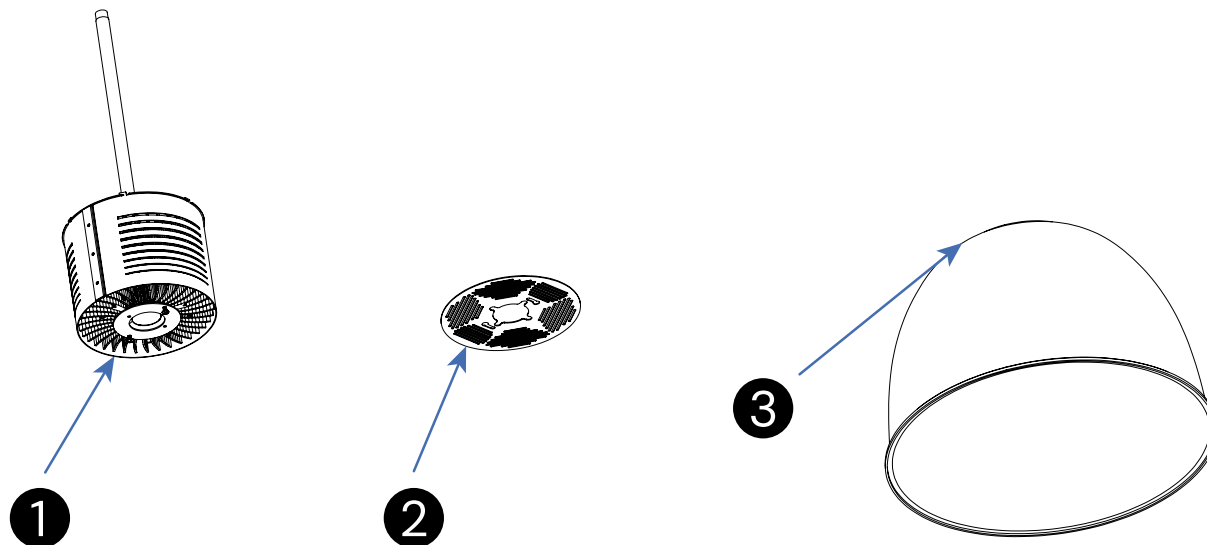

Shade for 12" and 16" High Bays

1. Align the shade with the main body, centered.
2. Insert the shade retention disk into the shade.
3. Match the disk keyslots with the screws on the bottom of the main body.
4. Push the disk inward so the screw heads pass through the keyslot openings (loosen screws if needed).
5. Rotate the disk until the screws lock into the narrow section of the keyslots.
6. Tighten the screws securely.

