


DRYWALL INSTALLATION INSTRUCTIONS


STEP 1.

Measure cutout and mark drywall where 12100-10-R series channel will be mounted.

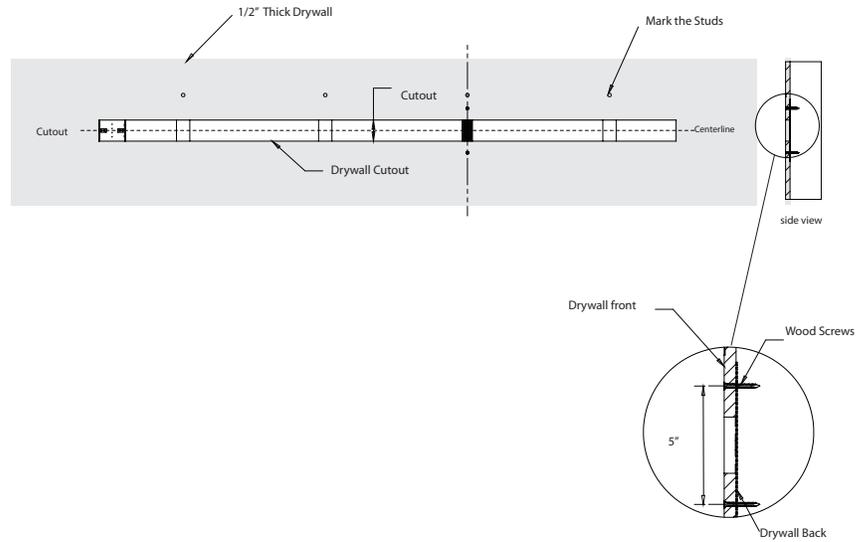

STEP 2.

Cut the channel to the desired length.

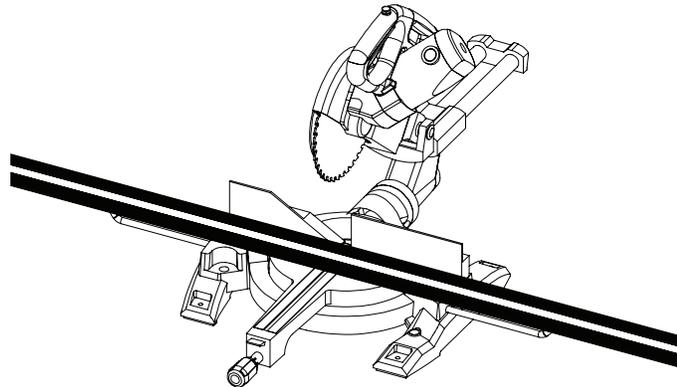

STEP 3.

Mount / Install 12100-10-R profile onto drywall. Drill and countersink channel with screws. Make sure all screw heads are flush with channel surface.

