



## INSTALLATION INSTRUCTIONS


### Recessed

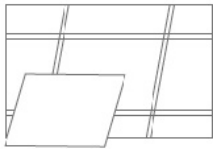


**1.**Remove ceiling plaster slab

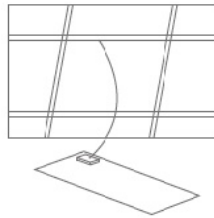

**2.**Connect Power Supply

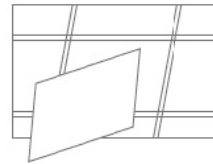

**3.**Fix panel light into the right place

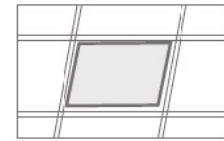


**4.**Stabilize the panel


### Pendant



**1A.**Fix the anchors into the target places on the ceiling.  
**1B.** Fix the installation mount on the ceiling with plastic anchor.

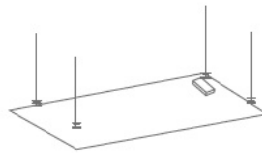


**2.**Hang the panel onto the ceiling suspending installation kits.

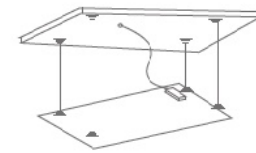


**3.**Adjust the length of steel wire then connect the power supply.


### Surface

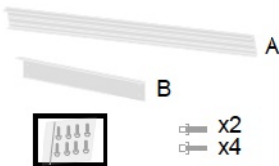


**1.**Take both Profiles A and B from the accessory pack

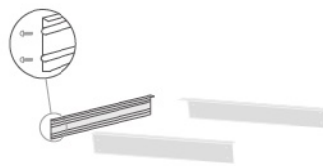


**2.**Assemble the pieces onto the aluminum profile with screws

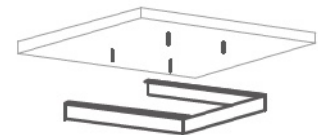

**3.**Mount the incomplete frame onto ceiling with screws. (Plastic anchor for concrete ceiling only).

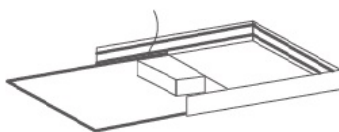

**4.**Slide Panel into frame properly.

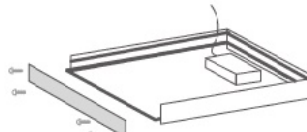

**5.**Assemble the last piece of aluminum profile with screws after panel is placed.