

WARNING:



RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY IN ACCORDANCE WITH NATIONAL, LOCAL BUILDING AND ELECTRICAL CODES. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.

14135 INSTALLATION INSTRUCTIONS FOR: RECESSED MRI LED DOWNLIGHT


Please read all instructions prior to installation and keep for future reference!

1. Check if the local voltage range corresponds with the working voltage of the fixture.
2. Make sure LEDs and drivers are cool to touch when performing maintenance.
3. Do not install in a hazardous atmosphere, except where the ambient temperature does not exceed the rated operating temperature of the fixture.
4. Keep tightly closed when in operation.



WARNING: RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY IN ACCORDANCE WITH NATIONAL, LOCAL BUILDING AND ELECTRICAL CODES. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.


14135 INSTALLATION INSTRUCTIONS FOR: RECESSED MRI LED DOWNLIGHT

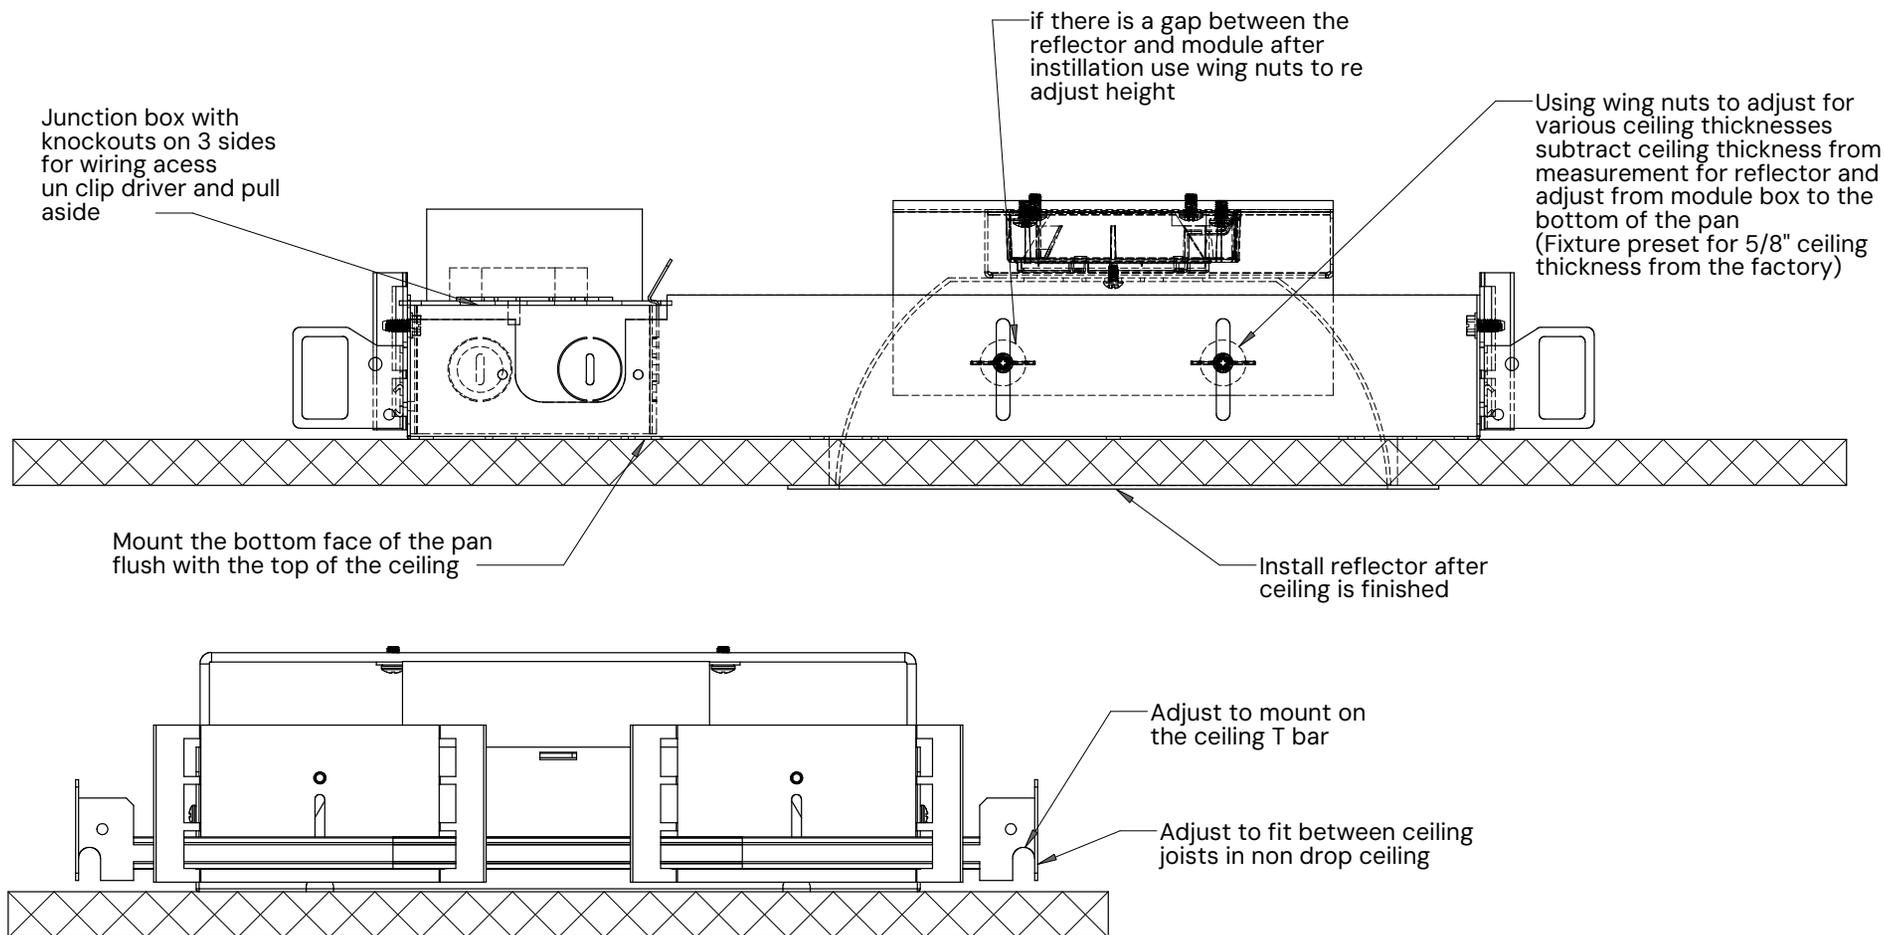

WARNING: RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY IN ACCORDANCE WITH NATIONAL, LOCAL BUILDING AND ELECTRICAL CODES. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.

14135 INSTALLATION INSTRUCTIONS FOR: RECESSED MRI LED DOWNLIGHT

Wiring Diagram

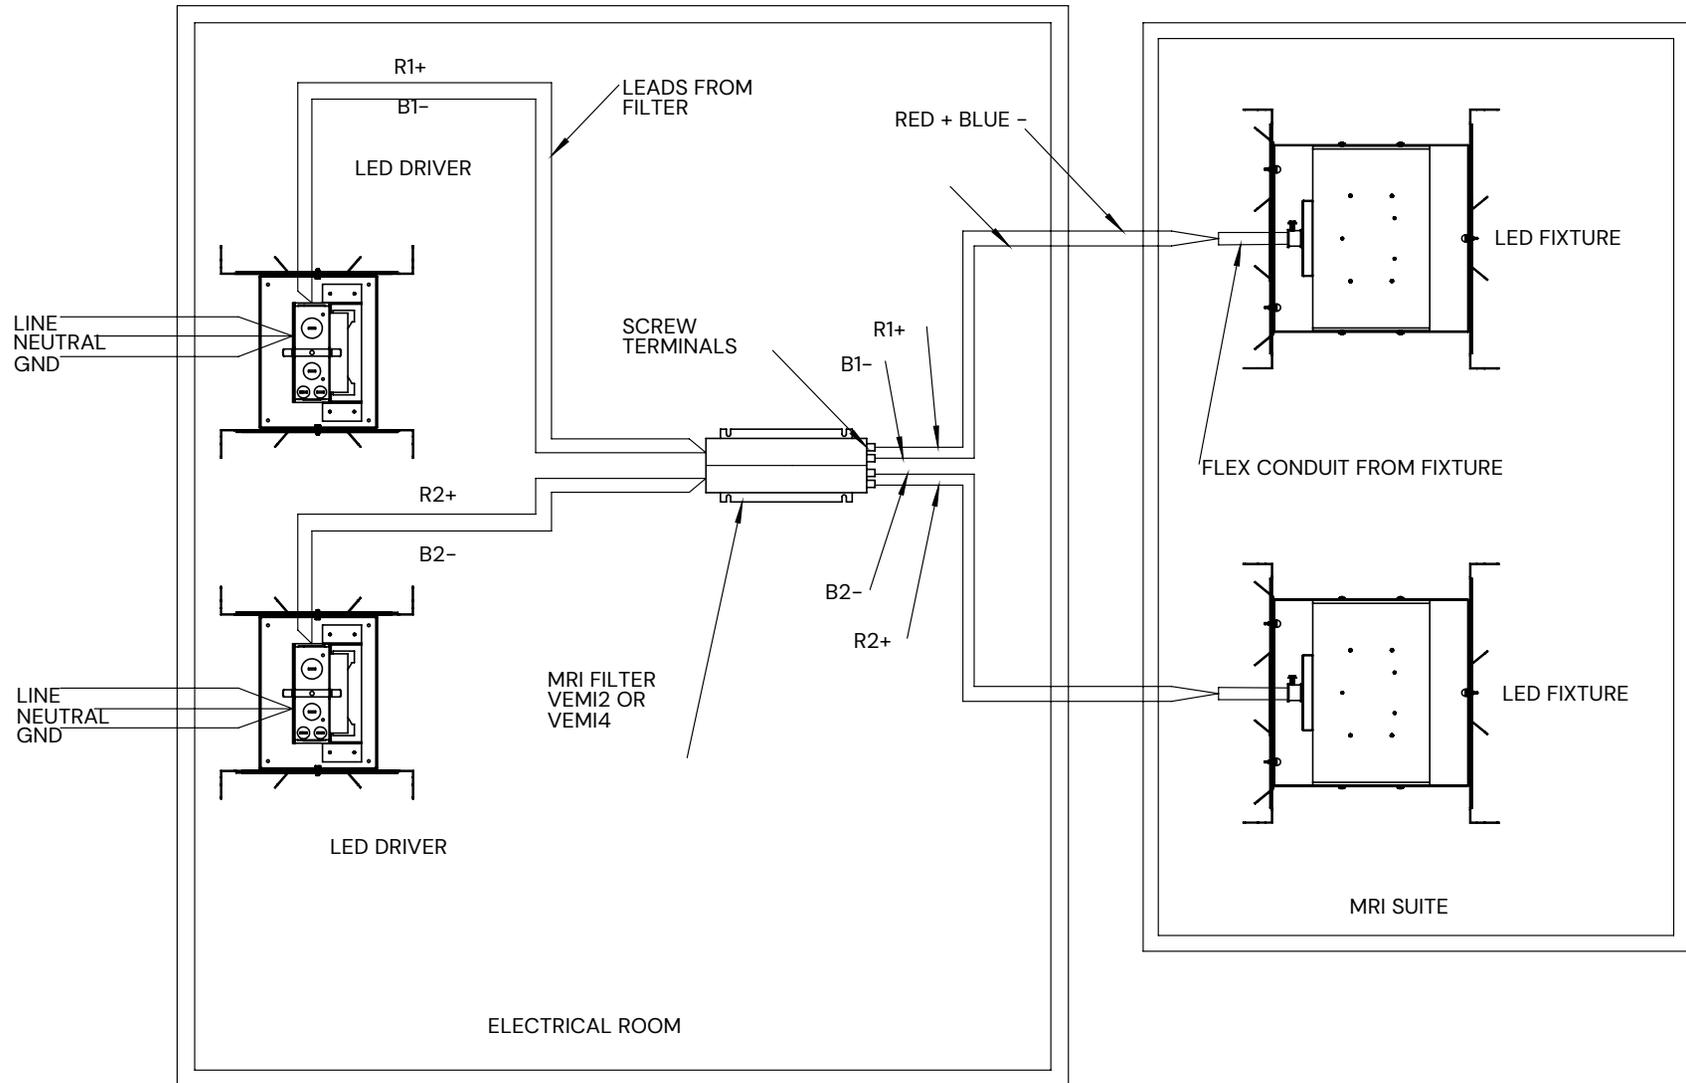

WARNING:



RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY IN ACCORDANCE WITH NATIONAL, LOCAL BUILDING AND ELECTRICAL CODES. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.

14135 INSTALLATION INSTRUCTIONS FOR: RECESSED MRI LED DOWNLIGHT

TOOL(S) NEEDED:

Cordless drill and an elbow or L-shape adapter with Philips Insert Bit extension.

