



Round

Round Series

Installation Instructions



WHEN USING ELECTRICAL EQUIPMENT, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED, INCLUDING THE FOLLOWING:

READ AND FOLLOW ALL SAFETY INSTRUCTIONS

1. Read carefully before installing fixture. Retain for future reference.

WARNING: To prevent electrical shock, turn off electricity at fuse box before proceeding.

2. FAILURE TO FOLLOW INSTRUCTIONS MAY RESULT IN SERIOUS INJURY OR DEATH

3. Upon receipt the fixture, thoroughly inspect for any freight damage which should be brought to the attention of the delivery carrier. Compare the catalog description listed on the packing slip with the fixture label on the housing to assure you have received material.

4. This fixture must be wired in accordance with the international electrical code and applicable local codes and ordinances. Proper grounding is required to insure personal safety. Carefully observe the correct grounding procedure under installation section

****NOTE: LUMINAIRE MUST BE INSTALLED BEFORE CEILING!****

Instructions



These fixtures should be installed by a qualified electrician, in accordance with national electric code and relevant local codes. If this unit is to be installed in a fire rated wall, this firebox accessory must be installed prior to rough-in installation.



STEM MOUNT SEE PAGE TWO FOR ADDITIONAL MOUNTING INSTRUCTIONS .

KEY




POWER OFF




POWER ON




ATTENTION

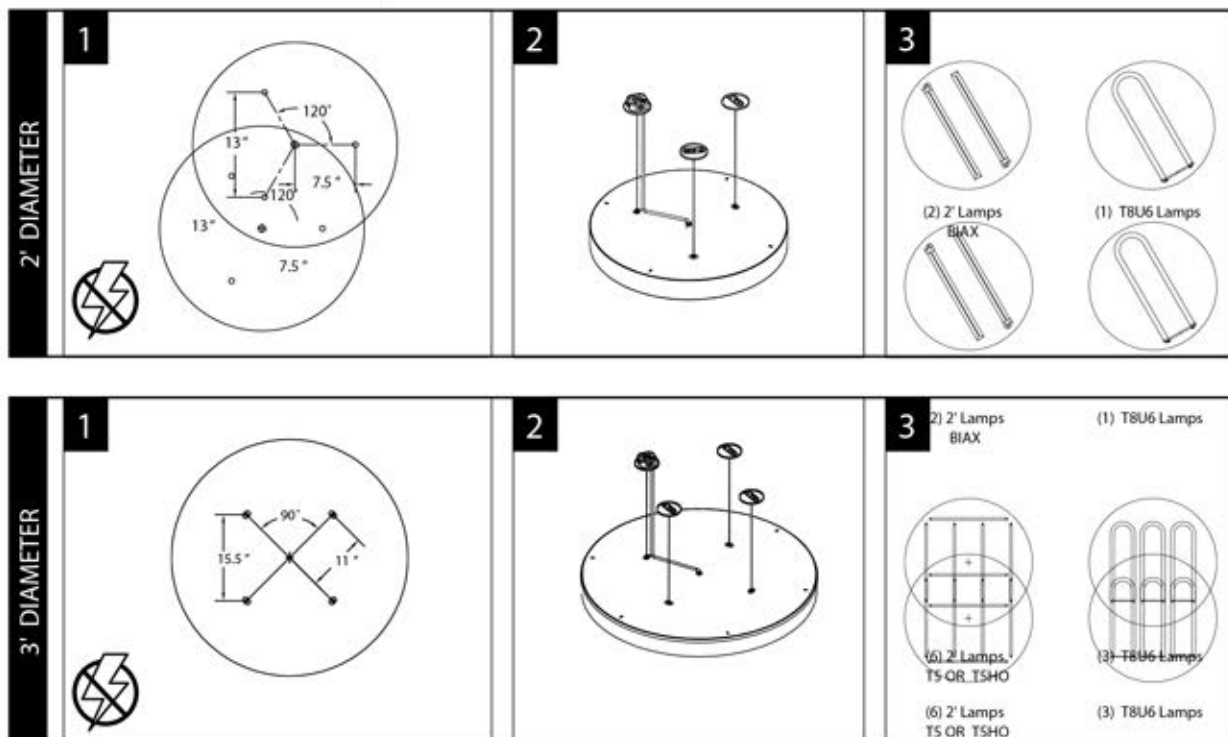


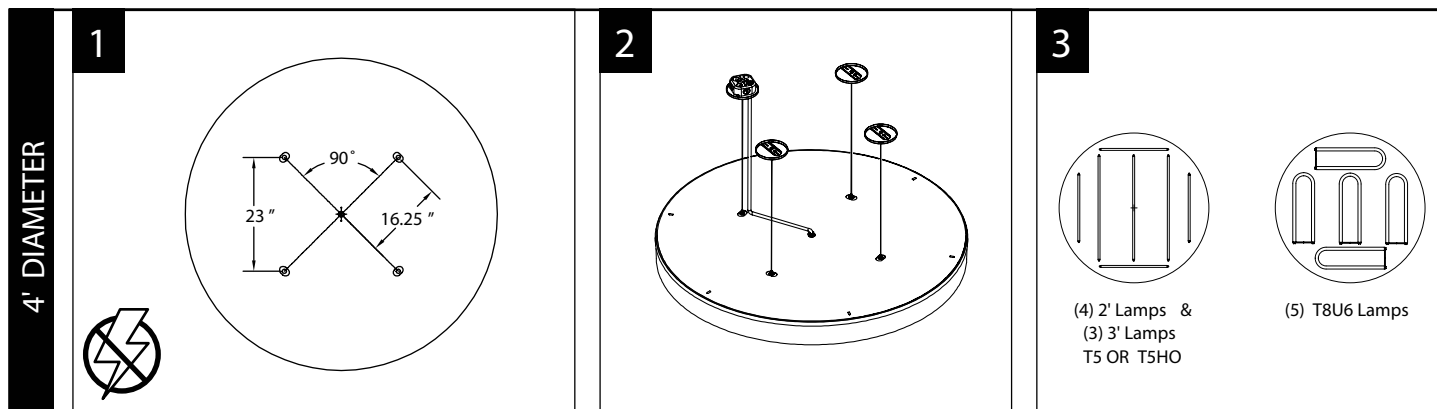

STEM MOUNT ONLY, FOR EACH MOUNTING LOCATION

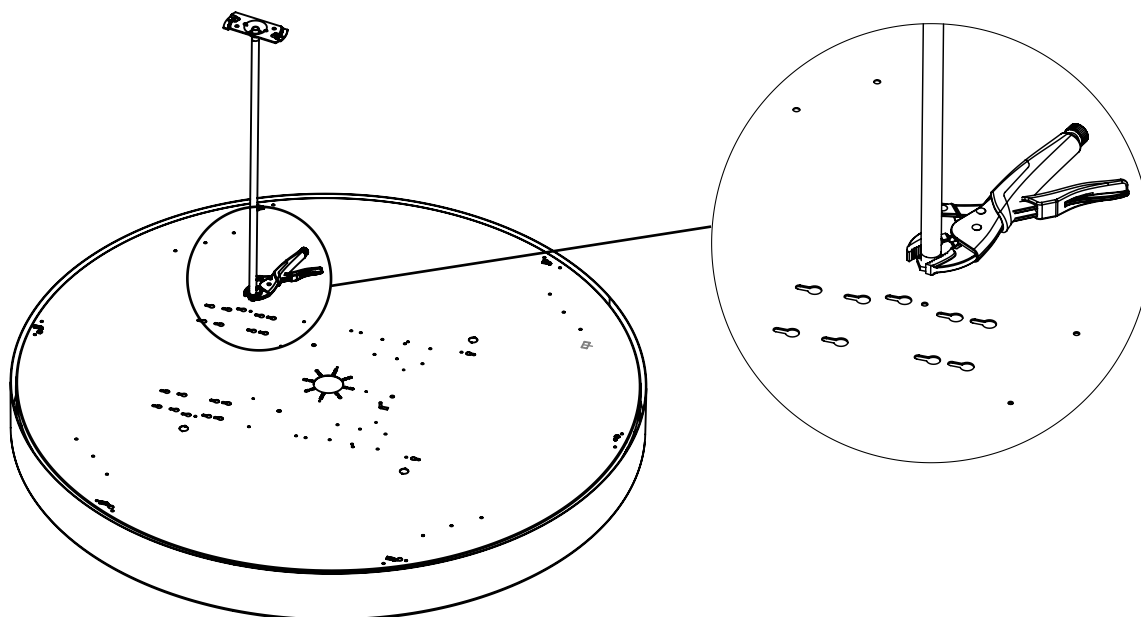

1. ATTACH THE STEM TO COVER . DO NOT OVER TIGHTEN STEM , THIS MAY CAUSE PINCHED WIRES .
2. USING PLIERS , SECURELY TIGHTEN LOCK NUT . STEM MUST BE SECURELY TIGHTENED AND UNABLE TO SPIN LOOSE .

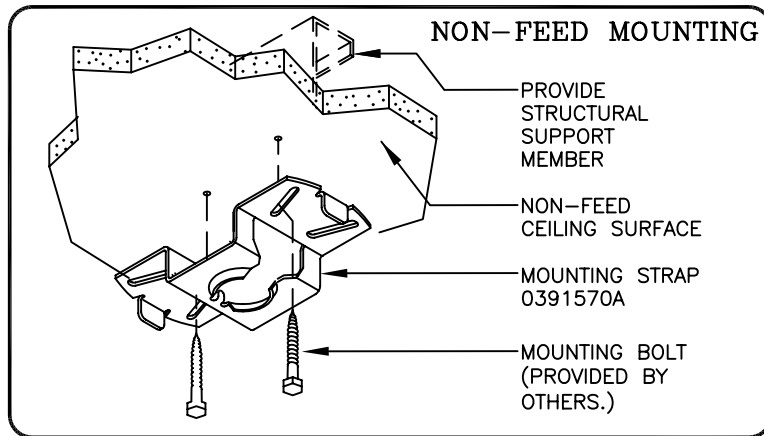

SUPPORTS MAXIMUM WEIGHT OF 50 LBS.


NOTE 1.
MOUNTING STRAP #0391570A, WILL ACCOMMODATE A 3", & 4" OCTAGONAL ELECTRICAL BOX, OR A 4" SQUARE BOX WITH PLASTER RING.

STEP 1 USE (2) #8-32 X 7/8" SCREWS TO ATTACH MOUNTING STRAP TO ELECTRICAL BOX.

STEP 2 SCREW BALL SWIVEL TO ONE END OF THREADED STEM. SECURE IN PLACE WITH SET SCREW. INSERT OTHER END OF STEM THROUGH HOLE IN CANOPY AND FASTEN TO FIXTURE WITH 3/8" I.P.S. LOCK NUTS AND WASHERS PROVIDED.

STEP 3 RUN WIRES THROUGH STEM AND RAISE FIXTURE ASSEMBLY TO CEILING. INSERT BALL SWIVEL INTO MOUNTING STRAP.

STEP 4 MAKE ALL NECESSARY WIRING CONNECTIONS PER NATIONAL AND LOCAL BUILDING CODE REQUIREMENTS. HAND PRESS CANOPY ONTO MOUNTING STRAP.

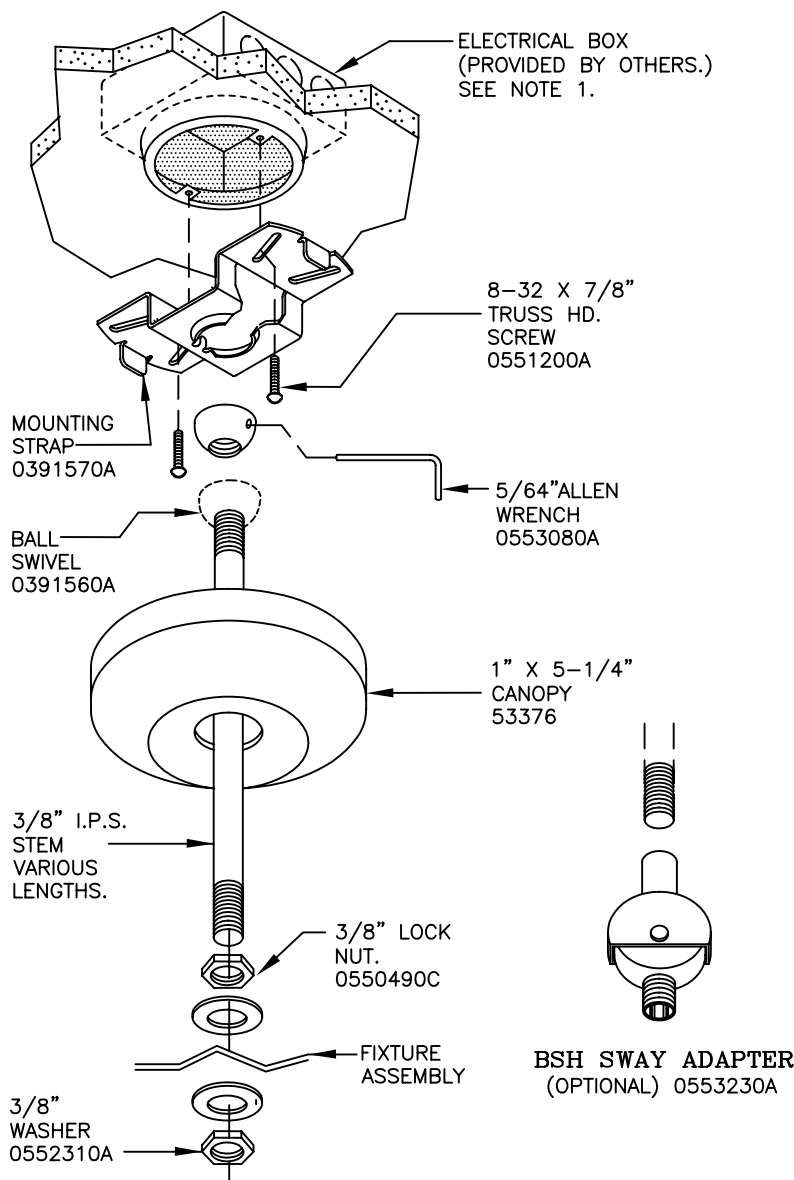

PARTS LIST

0551200A	#8-32 X 7/8" TRUSS HD. MACHINE SCREW	2
0391570A	#14 GAUGE MOUNTING STRAP	1
0391560A	3/8" I.S.P. BALL SWIVEL	1
0553080A	5/64" ALLEN WRENCH	1
53376	1" X 5-1/4" DIAMETER CANOPY	1
0552310A	3/8" X 7/8" PLAIN WASHER	2
0550490C	3/8" LOCK NUT	2
0531680A	BSH SWAY ADAPTER (OPTIONAL)	1
3/8" I.P.S. THREADED STEM (VARIOUS LENGTHS)		
0531440A	6" LONG THREADED ENDS	
0531460A	12" LONG THREADED ENDS	
0531480A	18" LONG THREADED ENDS	
0531490A	24" LONG THREADED ENDS	
0531500A	30" LONG THREADED ENDS	
0531510A	36" LONG THREADED ENDS	
0531540A	48" LONG THREADED ENDS	
0531580A	60" LONG THREADED ENDS	
0531590A	72" LONG THREADED ENDS	
0531610A	96" LONG THREADED ENDS	