INSTALLATION INSTRUCTIONS

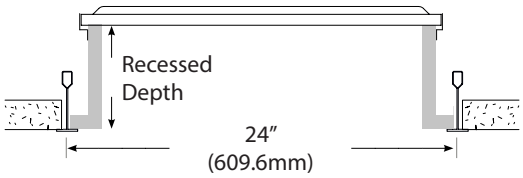

1, Place the flat panel (2x2 or 2x4) on top and position the corner.

MUST use magnetic tip drill bit.

2, Place the clips at each corner, use 2 screws per clip to fix altogether.