CIRCLINE-12280

SR–Standard Remote

Installation Instructions

WARNING: Disconnect main power at the source prior to installation! *Only qualified electricians should install Alcon Lighting products.*

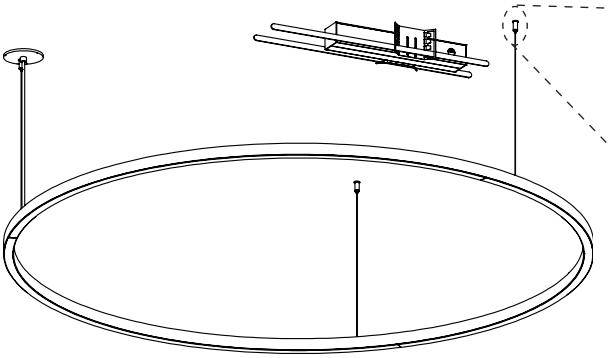

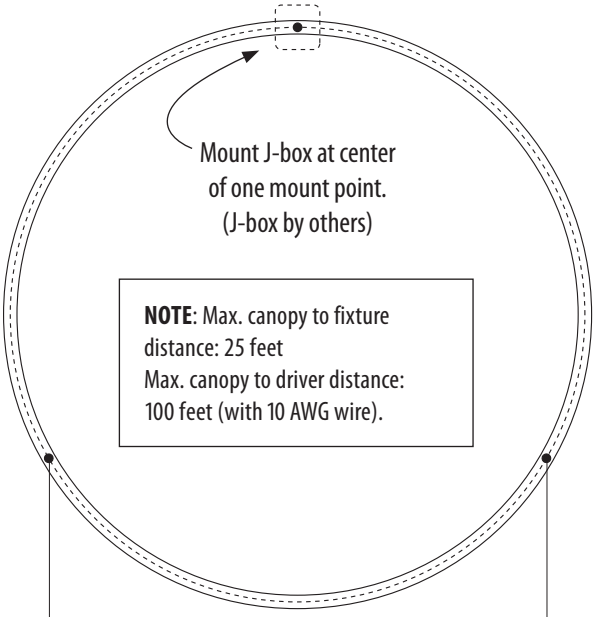

NOTE: Max. canopy to fixture distance: 25 feet
Max. canopy to driver distance: 100 feet (with 10 AWG wire).

Three mounting points, equally spaced:
24″ dia. @ 20.785″ spacing
34″ dia. @ 29.45 spacing
44″ dia. @ 38.1″ spacing
64″ dia. @ 55.426″ spacing
79″ dia. @ 68.42″ spacing

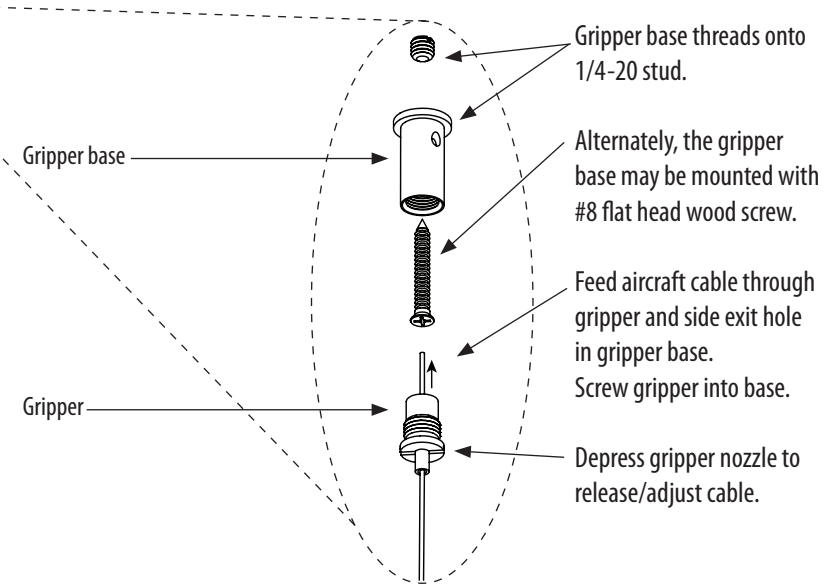

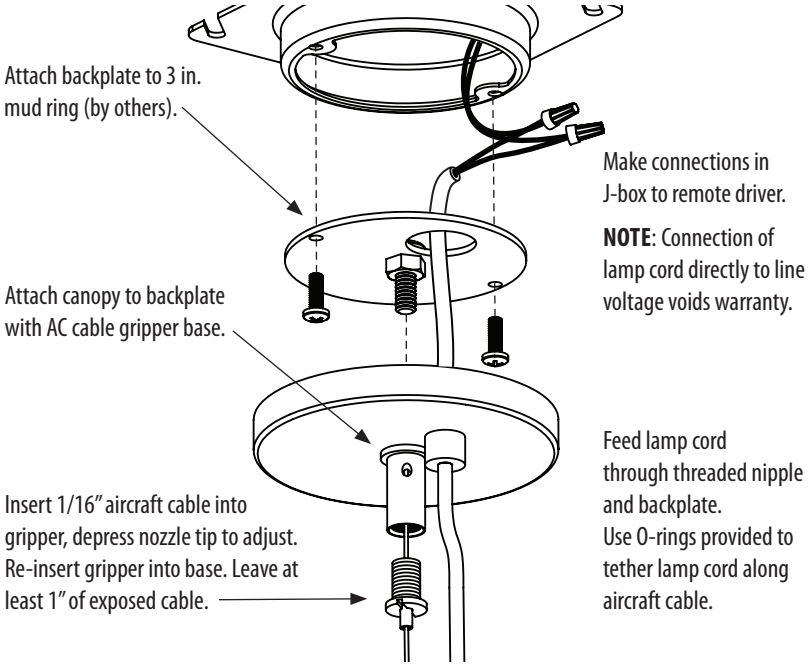

Direct Only wiring:
Red to 24VDC positive
Blue to 24VDC negative

Direct/Indirect wiring:
Red to 24VDC positive
Blue to 24VDC negative — Driver 1

Red/White to 24VDC positive
Blue/White to 24VDC negative — Driver 2

Dimming:
Purple and Gray wires from driver to 0-10V dimmer, cap if not used.

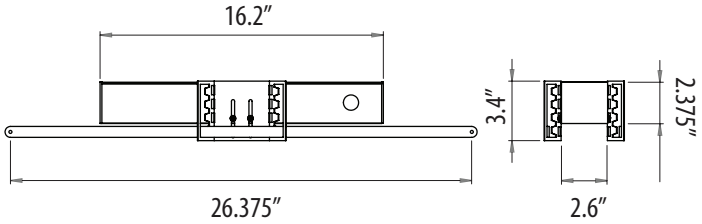

Remote driver includes bar hangers to mount above suspended ceilings. Drivers must remain accessible after installation. Driver housing must not be mounted any closer than 4 inches apart. Bar hangers and brackets may be removed for direct mount to structure with screws. Connect J-box to driver housing with conduit (by others).