


WARNING: Disconnect main power at the source prior to installation! Only qualified electricians should install Alcon Lighting products.

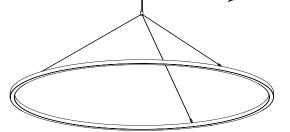

CIRCLINE

CPR – Centerpoint with Remote driver


Installation Instructions

Remote driver housing includes bar hangers to mount above suspended ceilings.

Drivers must remain accessible after installation, and must not be mounted closer than 4 inches apart.

Bar hangers and brackets may be removed for direct structure mount with screws. Use conduit (by others) to connect J-box to driver housing.

Maximum distance from lamp to driver is 100 feet, with 10AWG wire.



Purple and Gray wires from driver to 0-10V

Insert cable ends into grippers, depress gripper nozzle to release/ adjust cable. After final adjustments, leave approximately 1 inch excess cable.

Make connections in **Circline wiring:** J-box to remote driver. Red to 24VDC positive Attach backplate NOTE: Connection of Blue to 24VDC negative to 3" mud ring lamp cord directly to (by others). line voltage voids **Dimming:** warranty. dimmer. Cap if not used. Feed lamp cord through threaded nipple and back plate. Use O-rings Use AC cable gripper base (provided), or cable ties, to attach canopy to to tether cord at backplate. intervals along aircraft cable. Insert 1/16" aircraft cable into gripper; re-insert gripper into base. **Unscrew Centerpoint** cable hub top cap; insert cable through top cap and into gripper nozzle. Press nozzle down to release cable and Fixture ships with 3 aircraft adjust length. cables pre-installed in After final bottom of Centerpoint hub. adjustments, leave minimum 1 inch Insert opposite cable ends excess cable below into grippers attached to Centerpoint hub. luminaire.